



Popcorn Hire Agreement & Disclaimer

- The **agreement of hire** includes the following **conditions of hire**:
- **Important Precautions.**
- ☐ You must **not** try to clean the popcorn machine after the hire. Water must NEVER be put on the popping kettle!. Any damage or loss will be subject to a payment to repair or replace. Please leave the machine dirty and we will take it away and clean it as part of the hire.
- ☐ A responsible adult must supervise the popcorn machine at all times. Children should not be allowed to use the machine under any circumstances.
- ☐ Always have the kettle motor switch OFF when not popping corn.
- ☐ The kettle will get very hot! USE CAUTION ALWAYS.
- ☐ The silver-warming base also gets very hot so use caution and use the scoop to collect popcorn.
- **Operating Instructions**
- ☐ Turn the Light switch on (right button) and leave this on to keep the popcorn warm.
- ☐ Turn on the spin button (middle button) when you are making popcorn, else you can leave this off.
- ☐ When you are ready to make popcorn pour in the middle measure of oil in the top kettle (lift the lid carefully)
- ☐ Pour in a measure of popcorn kernels (largest measure)
- ☐ Flavourings
- o You can only choose one flavour to use during the hire.
- o If you want to use salt then when you have popped some corn sprinkle a small amount over the popped corn and use the scoop to spread the salt around the popcorn.
- o For sugar pour in the smallest measure of sugar into the top kettle
- ☐ Turn on the Spin button (middle button)
- ☐ Turn on the Kettle heater (left button)
- ☐ On the first batch only, allow the kettle to heat up and this will take about 5 minutes or so, any further batches will take less time to pop as the kettle will be warm already.
- ☐ As soon as the corn starts to pop and you will see the lid moving turn **OFF** the kettle heater straight away (right button) You can keep the rest of the buttons on. If you don't turn this button off the oil will burn and could damage the machine.
- ☐ Keep the doors almost closed as the popcorn will fly out of the machine if the doors are left open.
- ☐ Allow the corn to start popping out of the kettle and when the popping slows down then tilt the kettle using the handle to drop the corn into the base of the machine, **USE CAUTION AS THE KETTLE IS HOT**. Let the kettle rotate back into position and repeat this a few times and check the lid of the kettle to make sure all the popcorn has popped and been dropped into the base.
- ☐ Once all the popcorn has been popped and out of the kettle then turn off the middle button.
- ☐ Repeat these instructions to make another batch.
- ☐ When you have finished with the popcorn machine and no longer want to popcorn then turn off all the buttons.
- **Equipment hire**
- ☐ The equipment must be returned in good condition with no dents or damage.
- ☐ All utensils must also be returned or will be liable for a fee. This includes such things as: Popcorn Machine, cart with feet, extension leads, jug, 3 measuring scoops, bin.
- **Popcorn Machine Disclaimer**
- I, the hirer, agree that I have been shown how to use the equipment and will abide by the operating instructions.
- I personally accept all responsibility in connection with the Popcorn machine, for any harm, injury, loss or damage including all associated risk I further state that I am of lawful age and legally competent to sign this agreement.
- I further state that I am of lawful age and legally competent to sign this agreement.

SIGNED: